


Jet PTX & JTX Frame

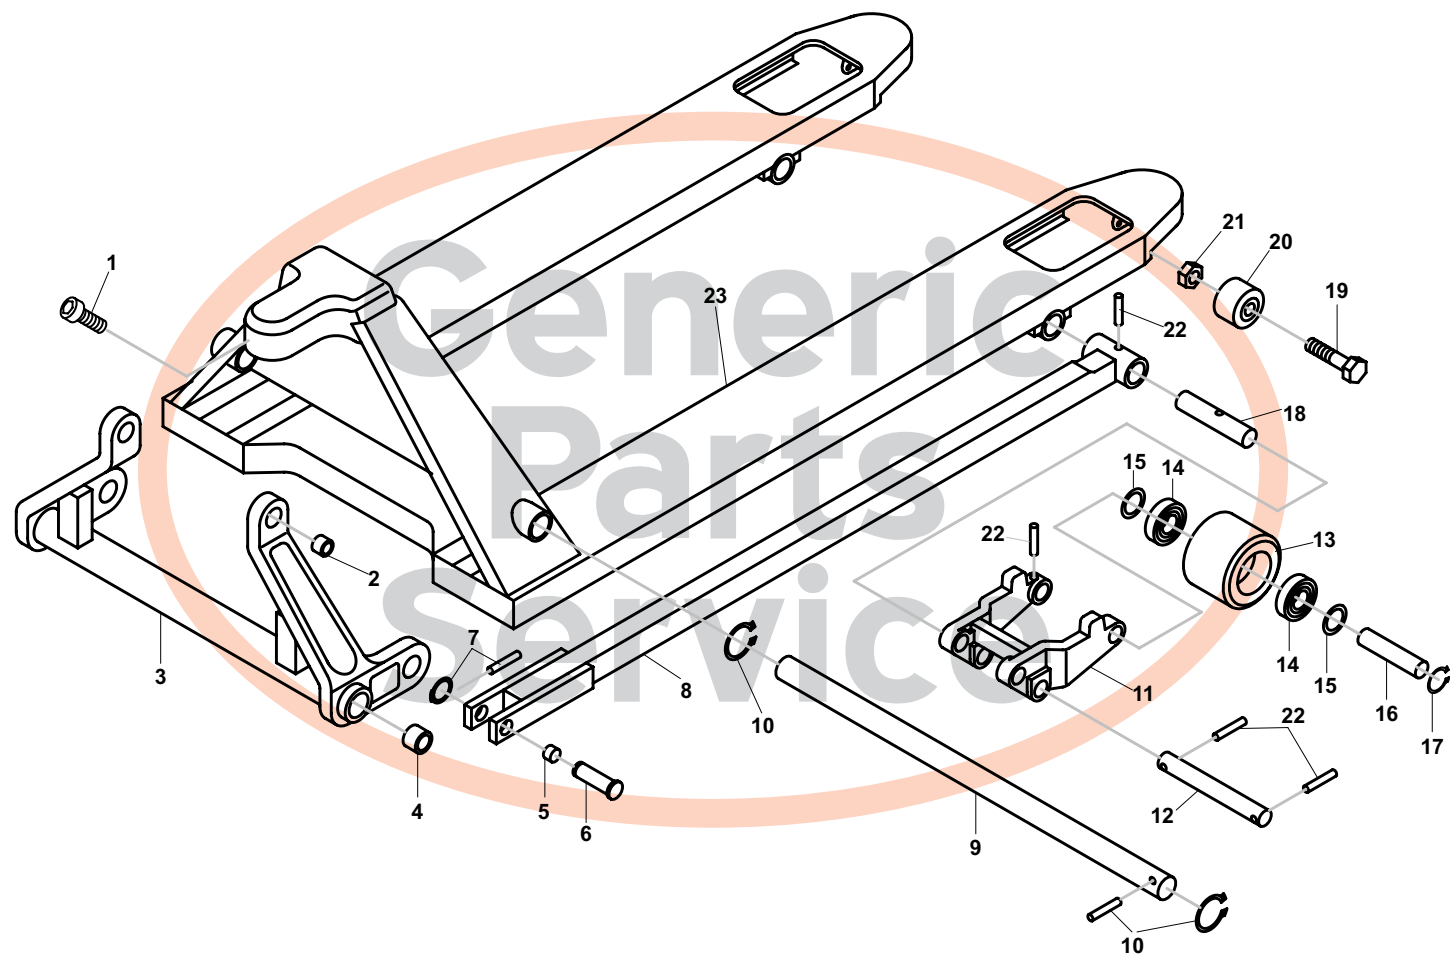

Jet PTX & JTX Frame

Item	Part No.	Description
1	TS-1503041	Socket Head Cap Screw
2	PTX2748-083	Bushing
3	PTX2036-084	Lifting Link, 20" Wide Jack
	PTX2748-084	Lifting Link, 27" Wide Jack
	JTX2748-084	Lifting Link, 27" Wide Jack
4	PTX2748-085	Oil Lite Bushing
5	PTX2748-086	Oil Lite Bushing
	JTX2748-086	Oil Lite Bushing (JTX)
6	PTX2748-086A	Crank Pin 70A
	JTX2748-086A	Crank Pin (JTX)
7	PTX2748-086B	Roll Pin 70B
	JTX2748-086B	Snap Ring (JTX)
8	PTX2036-087	Push Rod, 36" Fork (PTX)
	PTX2748-087	Push Rod, 48" Fork (PTX)
	JTX2748-087	Push Rod, 48" Fork (JTX)
9	PTX2036-088	Lifting Link Shaft, 20" Wide Jack
	PTX2748-088	Lifting Link Shaft, 27" Wide Jack
	JTX2748-088	Lifting Link Shaft, 27" Wide Jack
10	TS-0367061	Roll Pin (PTX)
	JTX2748-089A	Snap Ring (JTX)
11	PT2748J-083	Load Wheel Bracket
	JTX2748-090	Load Wheel Bracket (JTX)

Item	Part No.	Description
12	PT2748J-078A	Pivot Axle
	JTX2748-092	Pivot Axle (JTX)
13	PT2748J-080BN	Load Wheel Assembly, Nylon W/ Bearings (PTX)
	JTX2748-094	Load Roller Assembly, Black Ultra-Poly on Steel Hub W/ Bearings (JTX)
	JTX2748-094BN	Load Roller Assembly, Nylon W/ Bearings (JTX)
14	BB-6004	Bearing
	JTX2748-095	Bearing (JTX)
15	JTX2748-097	Washer (JTX only)
16	PT2748J-082	Load Wheel Axle
	JTX2748-097	Load Wheel Axle (JTX)
17	PT2748J-081A	Snap Ring
18	PT2748J-086A	Push Rod Axle
	JTX2748-098	Push Rod Axle (JTX)
19	TS-1490101	Hex Cap Bolt
20	PTX2748-100	Entry Roller
21	PT2748A-015	Nut
22	PT2748J-081	Spring Pin
23	PTX2036-102	Fork (for PTX-2036)
	PTX2048-102	Fork (for PTX-2048)
	PTX2748-102	Fork (for PTX-2748)